
How To Clean Your Fudge Cooker/Mixer Hub Seal Assembly Cleaning Procedure

The instructional content provided is for general informational purposes only. It is to be used as a reference and is not to be considered a complete or exhaustive resource. Users should always consult the appropriate product manual for specific step-by-step instructions. If you are in need of further assistance, please contact Gold Medal directly at 800-543-0862 or email info@gmpopcorn.com.

Follow the directions below WEEKLY to ensure proper machine performance. IMPORTANT: For proper machine performance. TOTAL CLEANING TIME: Approximately 10 Minutes



With the machine OFF, unplug the unit and allow it to cool before attempting to clean the Hub Seal Assembly.

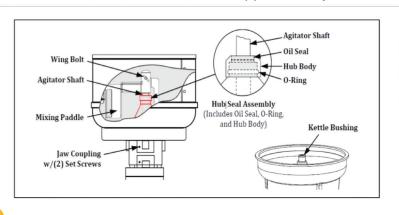

Remove paddle via the small wing nut lock stud. Remove any burrs on the shaft using a fine grit emery paper to lightly sand the surface. If burrs are not removed, damage may occur to the o-ring/oil seal during removal/installation.



Remove the hub seal assembly and soak it in hot water to clean. Clean the area around the center hub and remove any product residue.



Lightly lubricate the center hub of the kettle with a small amount of vegetable oil to allow for easy re-installation of the hub seal assembly.



Slide the clean hub seal down the agitator shaft. Apply pressure to ease the assembly over the center hub of the kettle until it seats properly.



After the hub seal assembly has been properly installed, re-install the mixing paddle onto the agitator shaft. Finger tighten the wing bolt to secure the mixing paddle in place.